

THE WOODWAY CURVE, NOW WITH RESISTANCE

CURVE + RESISTANCE = FTG (FORCE TRAINING GEAR)

The Curve FTG is a resistance treadmill that combines the Curve Trainer and 20 levels of resistance. Our treadmill is designed to help the user exercise with proper form and technique. The patent pending handrails allow for biomechanically correct positions when pushing and pulling at various levels of resistance and our display is at a height that is “heads up.” WOODWAY built this treadmill at a minimum 130-degree angle to reduce stress on the achilles - reducing the chance of injury.

In addition, our resistance levels start off minimally and increase at a gradual pace - gradual increase is shown to generate longer runs at higher speeds. To further enhance the user experience WOODWAY has given the Curve FTG ProSmart capabilities. User customization will allow you to train with the support of preprogrammed workouts, periodization’s, and biofeedback. STRIDELAB is the only native gait analysis software on any treadmill. STRIDELAB allows a user to gain immediate feedback on running mechanics - helping you to practice proper gait and running mechanics for better workouts and better health.




Curve 10" Pro Smart Display showing StrideLab

- Standard Feature
- Optional Feature

	CURVE	
USER INTERFACE	10" Touchscreen	○
	Resistance Levels	20
	Coded/Non-Coded Polar Heart Rate Pick-up	●
	USB Digital Speed Output	○
	USB Digital Speed Output with Curve Pro Software (Curve 1.5)	○
	RFID System	○
	LED Display Board	●
	SPECIFICATIONS	Running Surface Dimensions
User Weight Capacity		Run: 400 lb. / Walk: 800 lb. (4 mph max)
Belt Type		60 Individual Slats
Running Surface		3/8" thick shock absorbing cushion
Drive System		112 Precision Ball Bearings with 12 Roller Guides (4 mm lateral tolerance)
Unit Weight		400 lb. (Shipping Weight 440 lb.)
Width		33" (84 cm)
Length		73" (185 cm)
Height		71" (180 cm)
Self-propelled		●
Reverse		NA
Power Supply		115 Vac 20 Amp Required for ProSmart Display and Curve FTG
Warranty		10 Year Frame & Belt 3 Year All Components 2 Year Battery Operated Display 1 Year Labor

Treadmill specifications subject to change without written notice | Warranties outside the U.S. may vary - Please contact your dealer for details.

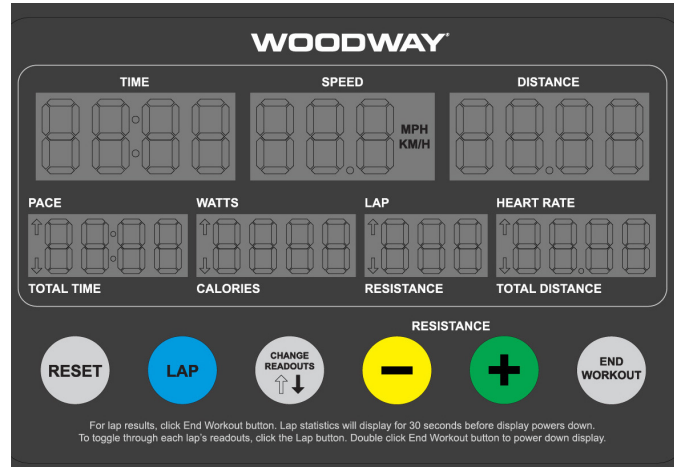

Curve FTG Standard Display Example



| CURVE SERIES



CURVE TRAINER

This compact non-motorized treadmill is designed for walkers and joggers who are looking to build endurance and increase stamina. Train comfortably and for longer periods of time while reinforcing proper gait mechanics and posture.



CURVE

From beginners to serious athletes the Curve is the universal cardio solution. Users can workout at any speed with full control of the treadmill, making the Curve the ideal sport specific high intensity and small group training tool.



CURVE XL

Popular among Professional Sports teams and military training facilities the Curve XL features all the innovations and benefits of the standard Curve in an extra-large platform for the larger-lengthier athletes.

FOR ADDITIONAL INFORMATION ABOUT THE FOLLOWING PRODUCT VISIT WWW.WOODWAY.COM OR CALL 800.WOODWAY TO TALK TO A REPRESENTATIVE.